

WARNING!!

The attached Gold Medal Manual is for reference only and is not intended for any other purpose. The information contained in these on line manuals is subject to change at any time. Improvements are always being made to Gold Medal equipment and this information may not be the latest available for your purposes. It is critical that you call Gold Medal Products technical service department at 1-800-543-0862 for any questions about machine operations, replacement parts, or any service questions. Neither Gold Medal nor Phil Erb Concessions represent that these on line manuals contain the most current information available for the product represented.

FUN POP 8 OZ. POPPER

Instruction Manual
Model #2408









Shown here on Model #2689CR Cart (Optional)

 **GOLD MEDAL**®

FUNFOOD EQUIPMENT & SUPPLIES

Cincinnati, OH 45241-4807 USA

SAFETY PRECAUTIONS

	<p style="text-align: center;">⚠ DANGER</p> <p>Machine MUST be properly grounded to prevent electrical shock to personnel. Failure to do so could result in serious injury, or death. Do NOT immerse the kettle, warmer, or any other part of this equipment in water. Always unplug the equipment before cleaning or servicing. Do not use excessive water when cleaning.</p>
	<p style="text-align: center;">⚠ WARNING</p> <p>To avoid serious burns, do NOT touch the kettle while it is hot.</p>
	<p style="text-align: center;">⚠ WARNING</p> <p>ALWAYS wear safety glasses when servicing this equipment.</p>
	<p style="text-align: center;">⚠ WARNING</p> <p>Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the off position before plugging the equipment into the receptacle.</p>
	<p style="text-align: center;">⚠ CAUTION</p> <p>This equipment is sold for commercial use only. Only personnel that are trained and familiar with the equipment should operate the equipment. Carefully read all installation, and operating instructions before operating the equipment.</p>
	<p style="text-align: center;">⚠ CAUTION</p> <p>This machine is NOT to be operated by minors. Minors are classified as anyone under the age of 18.</p>

NOTE

The information, specifications and illustrations contained in this manual represent the latest data available at time of publication. Right is reserved to make changes as required at the discretion of Gold Medal Products Company without notice.

INSTALLATION INSTRUCTIONS

Checking Shipment

Unpack carton and check thoroughly for any damage, which may have occurred during transit. Damage claims should be filed immediately with the transportation company.

Electrical Requirements

The Model #2408 is designed to operate on a 120 Volt / 15 Amp / single-phase outlet. Make sure the popper is on a dedicated line, and that no other appliances are on the same circuit.

OPERATING INSTRUCTIONS

CONTROLS AND THEIR FUNCTIONS

There are three switches on the popper.

LIGHT AND WARMER SWITCH

Turns on the heat to the bottom corn pan and heat light.

KETTLE MOTOR SWITCH

Turns on the motor which drives kettle agitator shaft.

KETTLE HEAT SWITCH

Turns on the heat element

AMOUNT OF POPCORN AND OIL

Your new popper is equipped with an eight-ounce corn measure cup. We recommend flavored and colored coconut oil. Popcorn popped in coconut oil stays fresh longer. Coconut oil does not leave black deposits in your kettle like other oils.


Corn charge - 8 oz. (240 ml)
Oil charge – 2.6 oz. (60 ml)
Flavacol – 1 tablespoon (8 cc)

POPPING INSTRUCTIONS



1. Turn KETTLE HEAT and KETTLE MOTOR switch ON.
2. Make test pop with 3 kernels of corn and 1/2 oz. (15 ml) of oil.
3. Load pre-measured popcorn and oil pouch into kettle.
4. Do not lift kettle lids(s) after popcorn is placed in kettle.
5. When corn has popped, dump kettle.
6. Repeat cycle starting with Item #3; always pop 3-5 batches for best popcorn.

CARE AND CLEANING


	<p style="text-align: center;">⚠ WARNING</p> <p>Unplug your machine before cleaning glass panels and case. Never immerse the kettle in water, this will ruin the electrical components and automatically void the warranty.</p>
---	---

Each time you finish a series of poppings, wipe the outside of the kettle with a soft cloth to remove any oil drippage on the outside of the kettle. After you finish popping for the day, allow kettle to cool until it is not too hot to handle, but still warm. Unplug kettle and remove it from the machine. With a cloth, wipe out the inside of the kettle, kettle lid, crossbar, outside and underneath of the kettle.


Cleaning the cabinet of your machine is easy. Take a clean cloth and wipe excess grease from the glass. Wipe the outside of the machine also.

NOTE: Never use a glass or plastic cleaner that contains ammonia. It will crack the plastic on the machine.

MAINTENANCE INSTRUCTIONS

	⚠ WARNING
	Do not immerse the kettle, warmer, or any other part of this equipment in water. Always unplug your machine before servicing.

	⚠ WARNING
	Adequate eye protection must be used when servicing this equipment to prevent the possibility of injury.

	⚠ CAUTION
	THE FOLLOWING SECTIONS OF THIS MANUAL ARE INTENDED ONLY FOR QUALIFIED SERVICE PERSONNEL WHO ARE FAMILIAR WITH ELECTRICAL EQUIPMENT. THESE ARE NOT INTENDED FOR THE OPERATOR.

ORDERING SPARE PARTS


1. Identify the needed part by checking it against the photos, illustrations, and/or the parts list.
2. When ordering, please include part number, part name, and quantity needed.
3. Please include your model name, serial number, and date of manufacture (located on the machine nameplate) with your order.
4. Address all parts orders to:

Parts Department
Gold Medal Products Co.
10700 Medallion Drive
Cincinnati, Ohio 45241-4807


or, place orders at:
(800) 543-0862
(513) 769-7676
Fax: (513) 769-8500
E-mail: info@gmpopcorn.com
Web Page: www.gmpopcorn.com

© The text, descriptions, graphics and other material in this publication are the proprietary and exclusive property of Gold Medal Products Company and shall not be used, copied, reproduced, reprinted or published in any fashion, including website display, without its express written consent.


CABINET ASSEMBLY

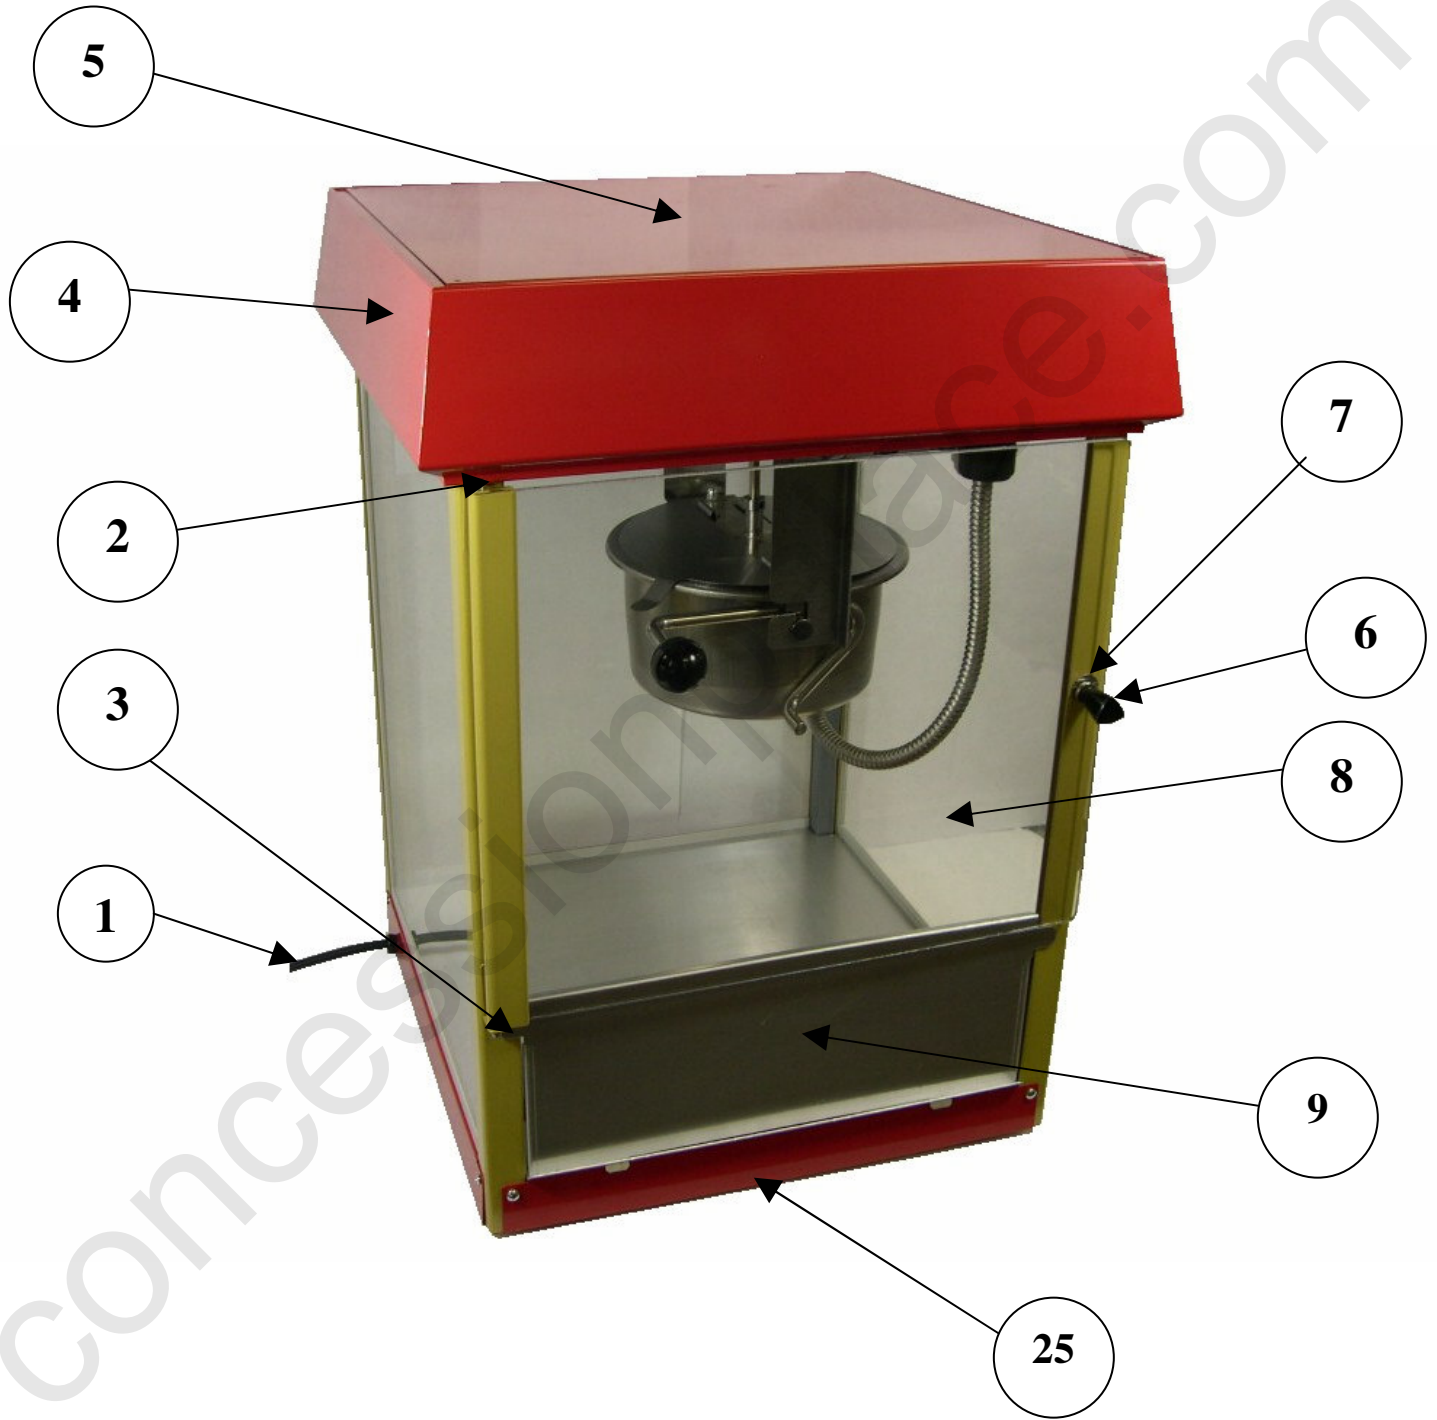


CABINET - INTERIOR ROOF

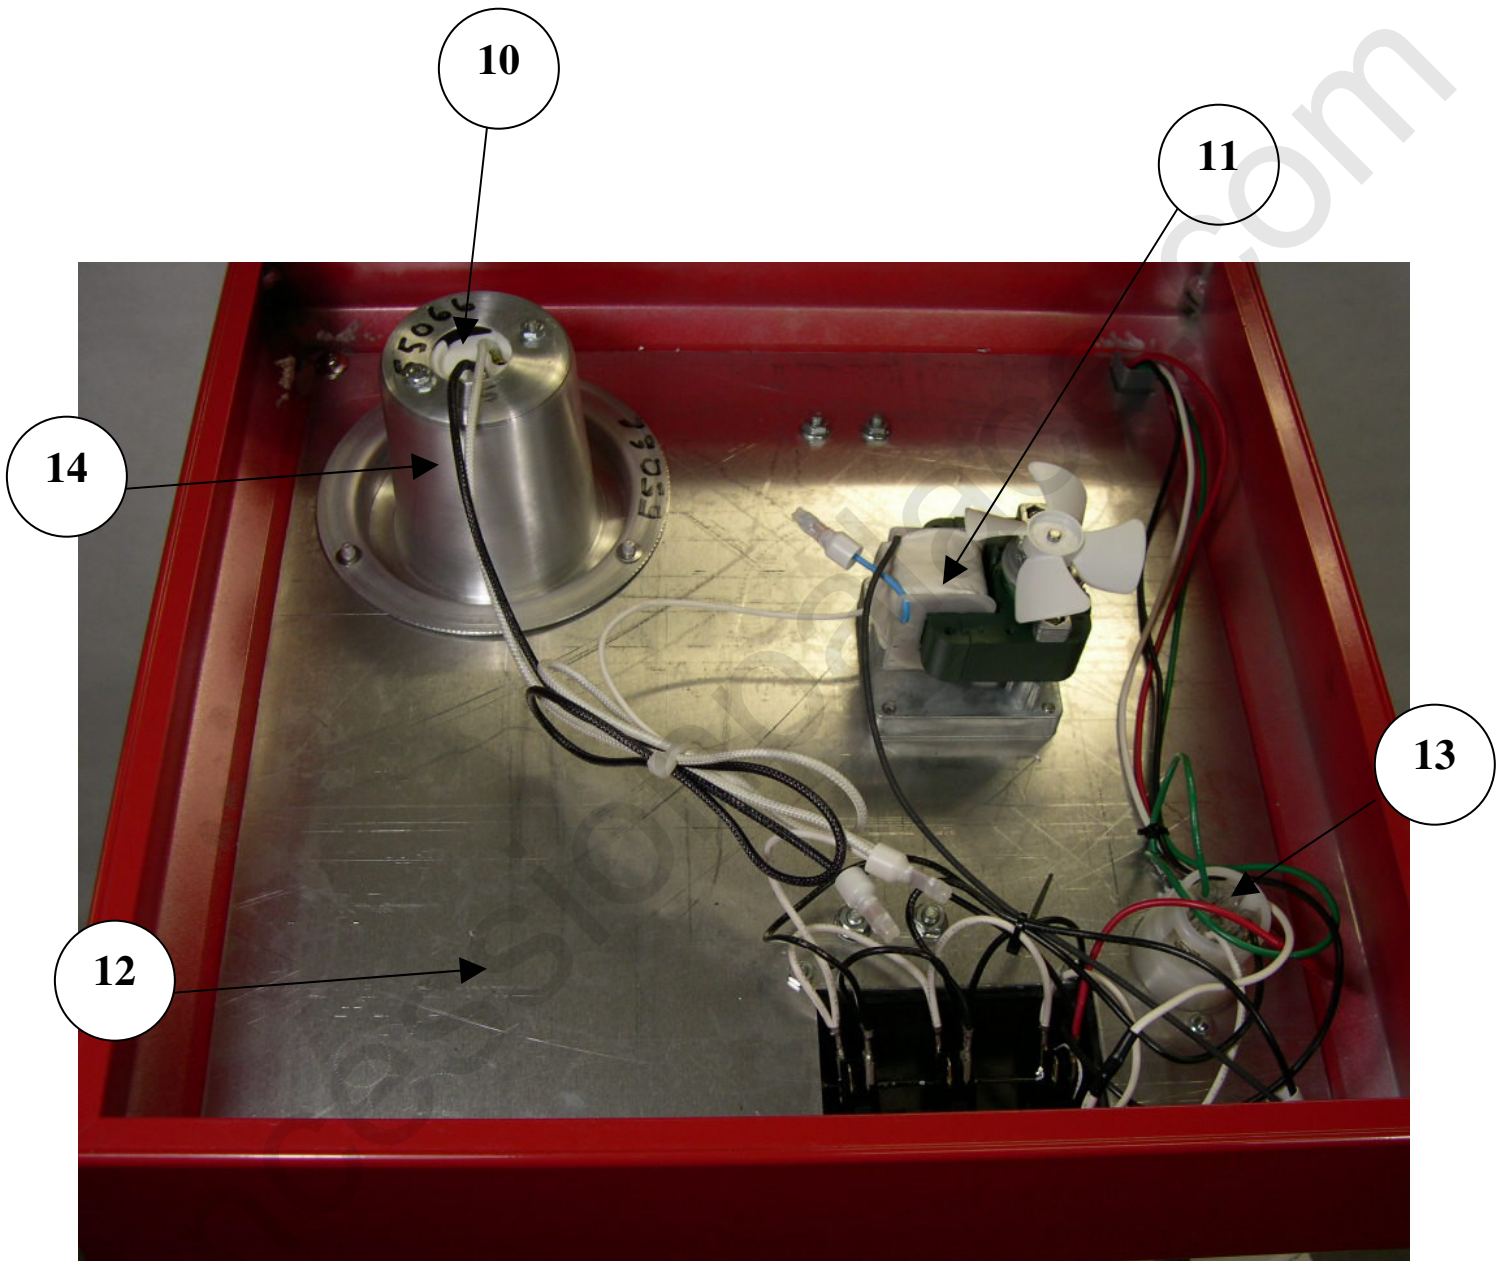

INTERIOR CABINET (TOP)

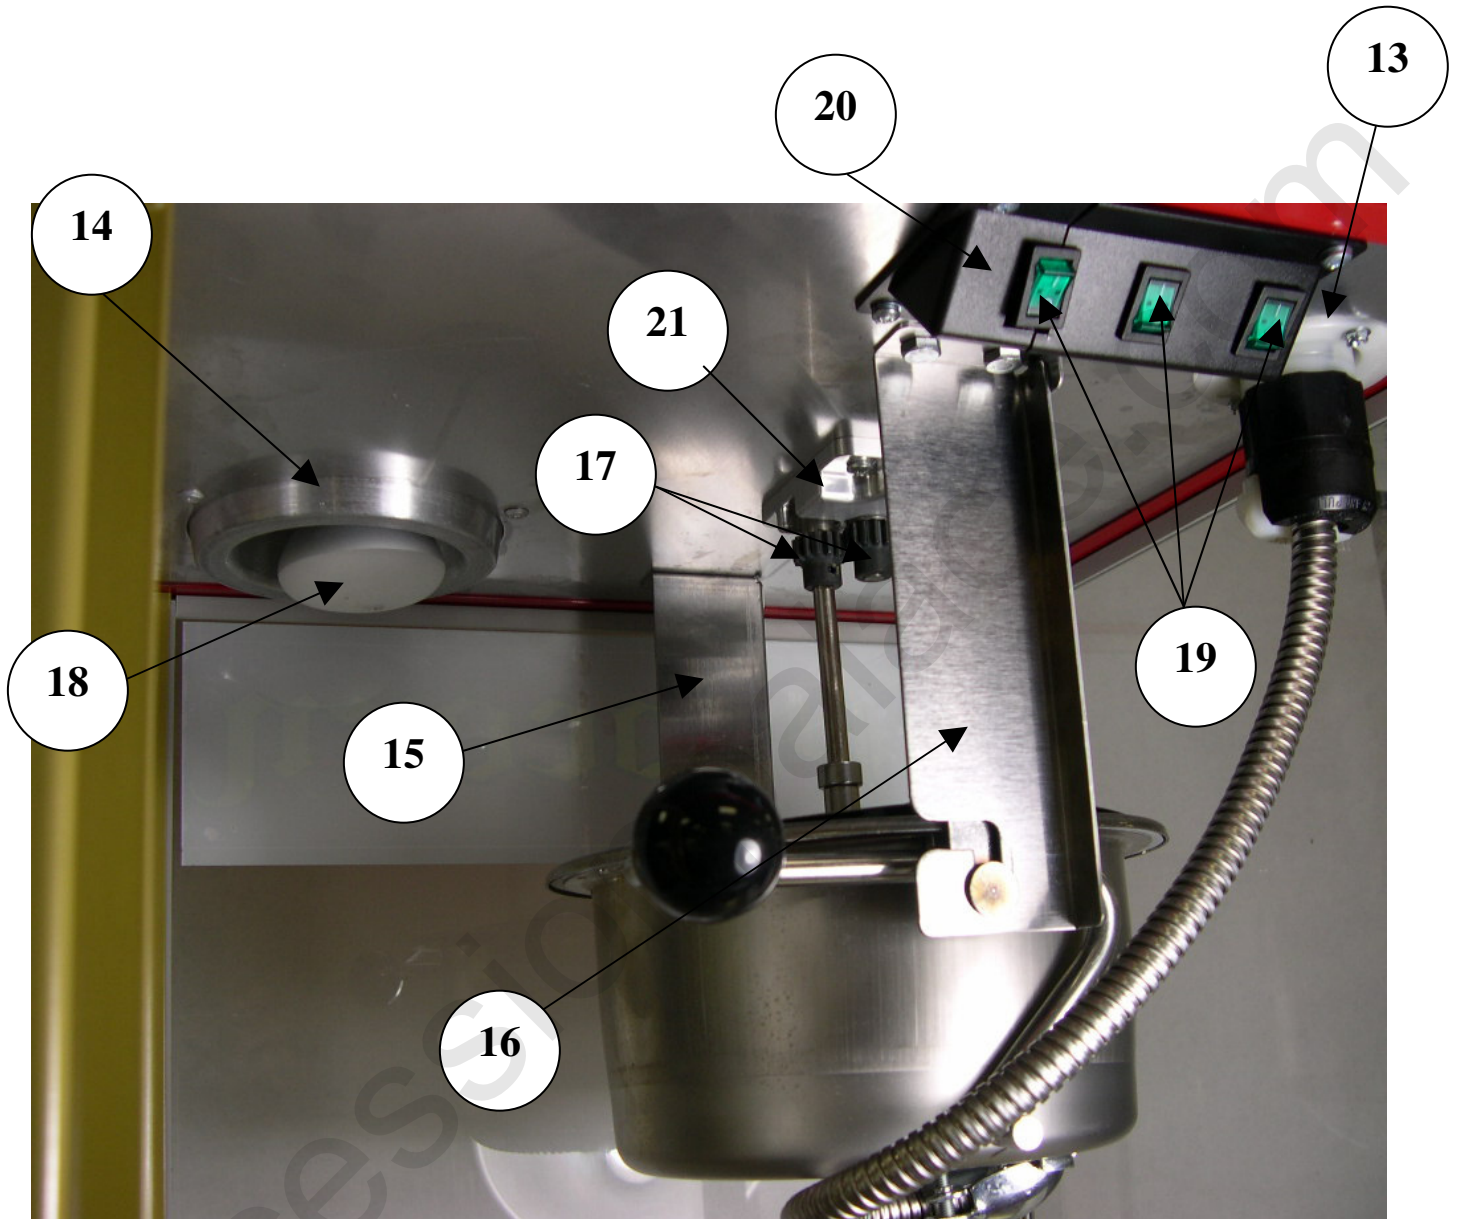


INTERIOR CABINET (BOTTOM)

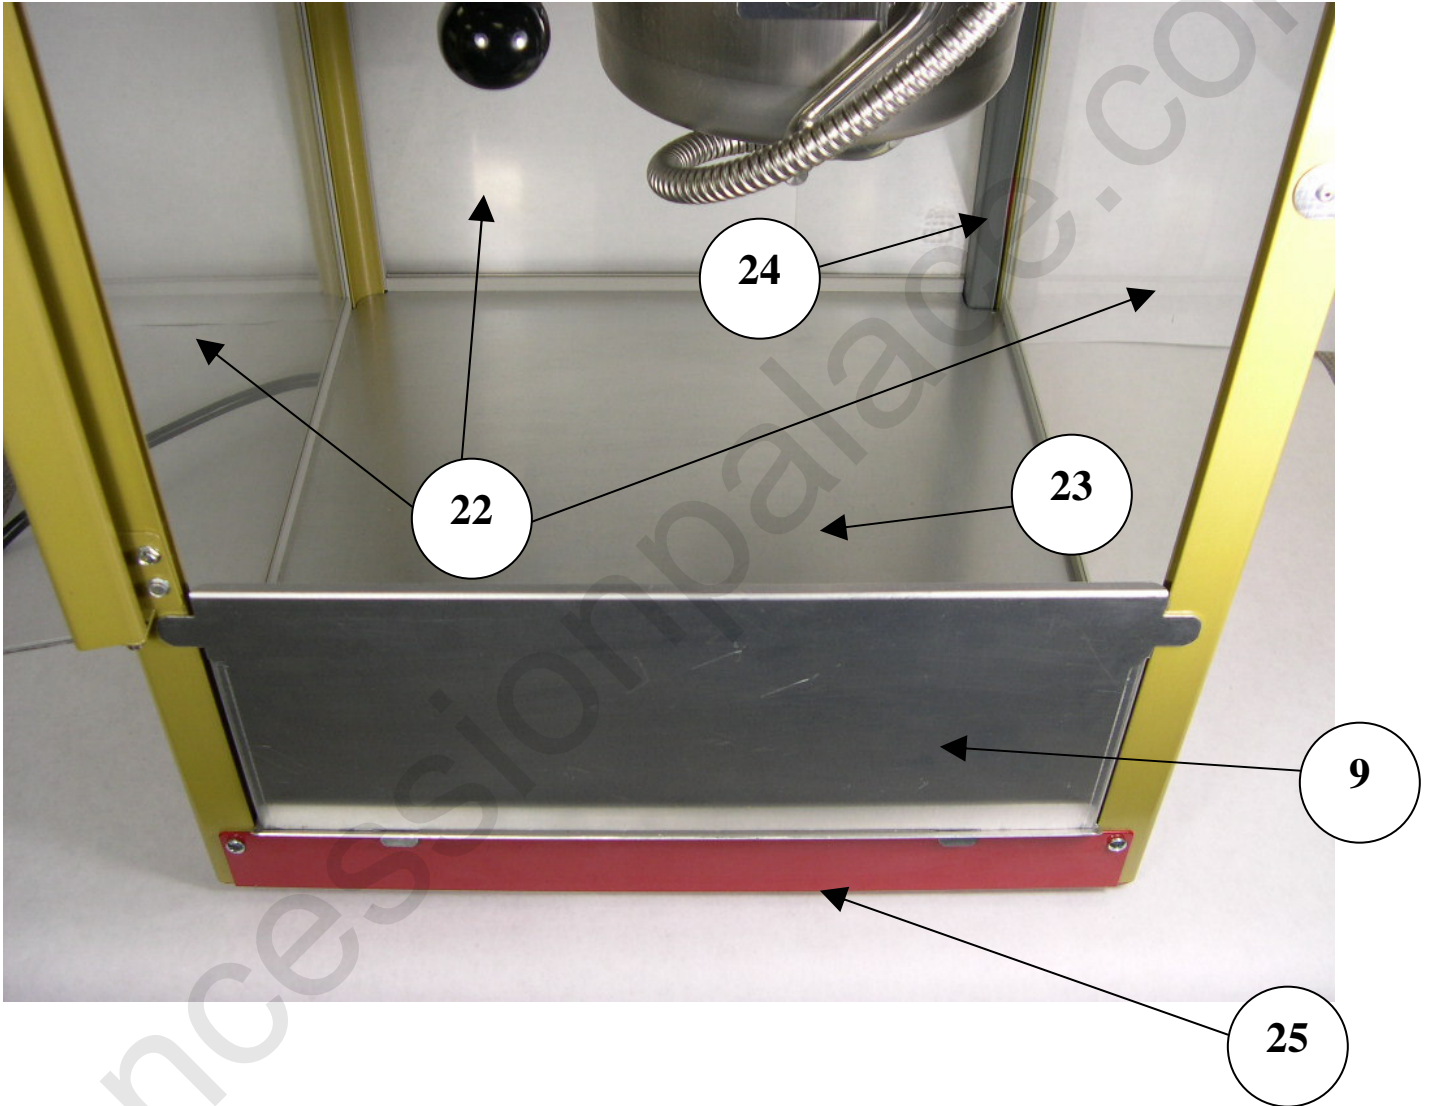

PART LIST – CABINET ASSEMBLY


Item #	Part No.	Description
1	22038	Lead-in Cord Assy.
2	55060	Top Hinge Bracket
3	55061	Bottom Hinge Bracket
4	58104	Top Dome Assembly
5	58101	Dome Cover
6	47120	Knob
7	55104	Latch Catch
8	58065	Door Assembly (Includes item #2)
9	58113	Drop Panel
10	56070	Lamp Holder
11	47038	Kettle Drive Motor
12	58107	Motor Plate
13	49330	Kettle Receptacle
14	55066	Light Cone
15	49010	Front Hanger Arm
16	49009	Rear Hanger Arm
17	47060	Spur Gear
18	47176	75 Watt Coated Bulb
19	42532	Lighted Rocker Switch
20	55076	Switch Mount Box
21	67194	Gear Block
22	58109	Glass
23	58110	Corn Pan
24	58077	Wire Route Cover
25	58064	Base Pan
	40557	120V / 20W Foil Heater (Not Shown)
	58001	Front Glass Decal (Not Shown)

8 OZ. KETTLE ASSEMBLY

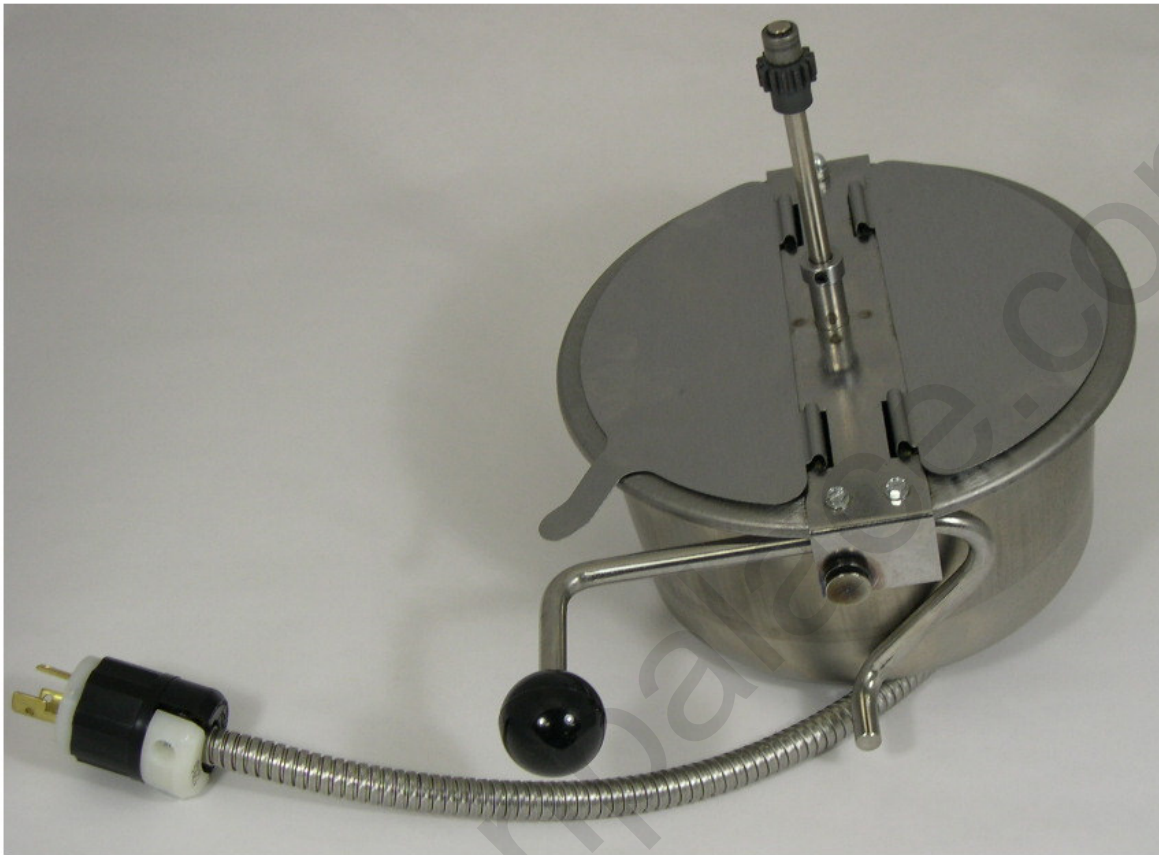


When ordered complete, (as shown above), the kettle is item number 58000C.

KETTLE BOTTOM

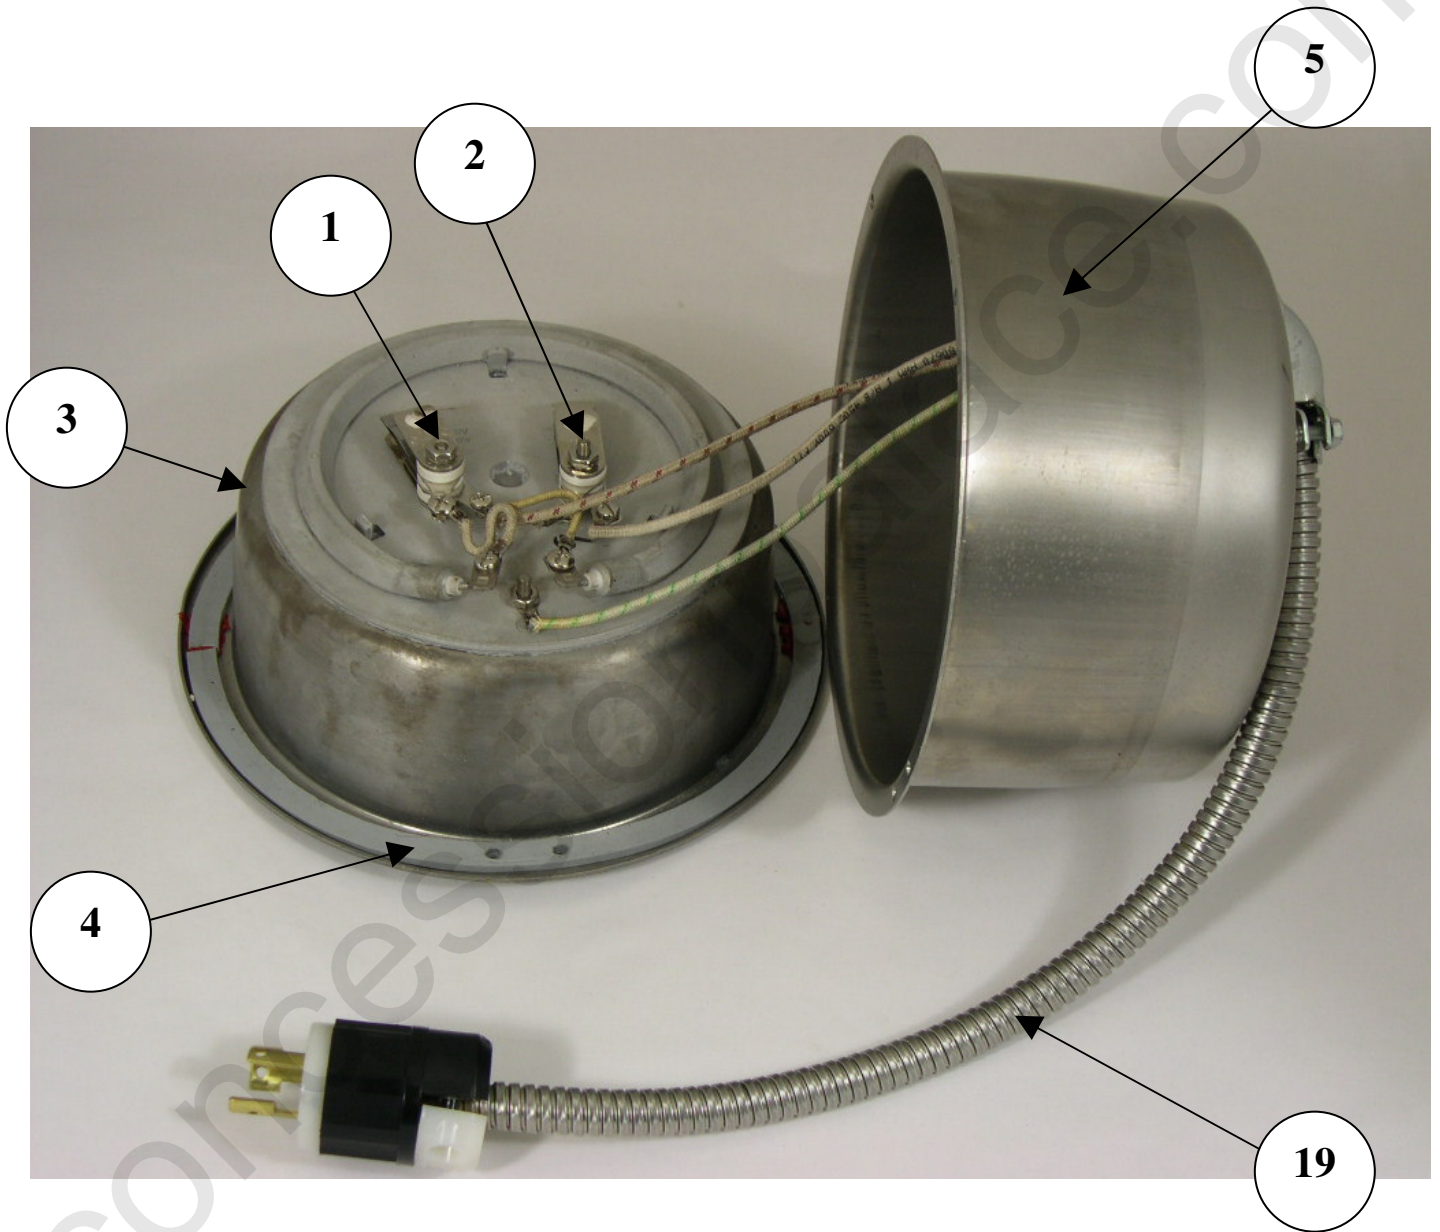


LID AND AGITATOR ASSEMBLY

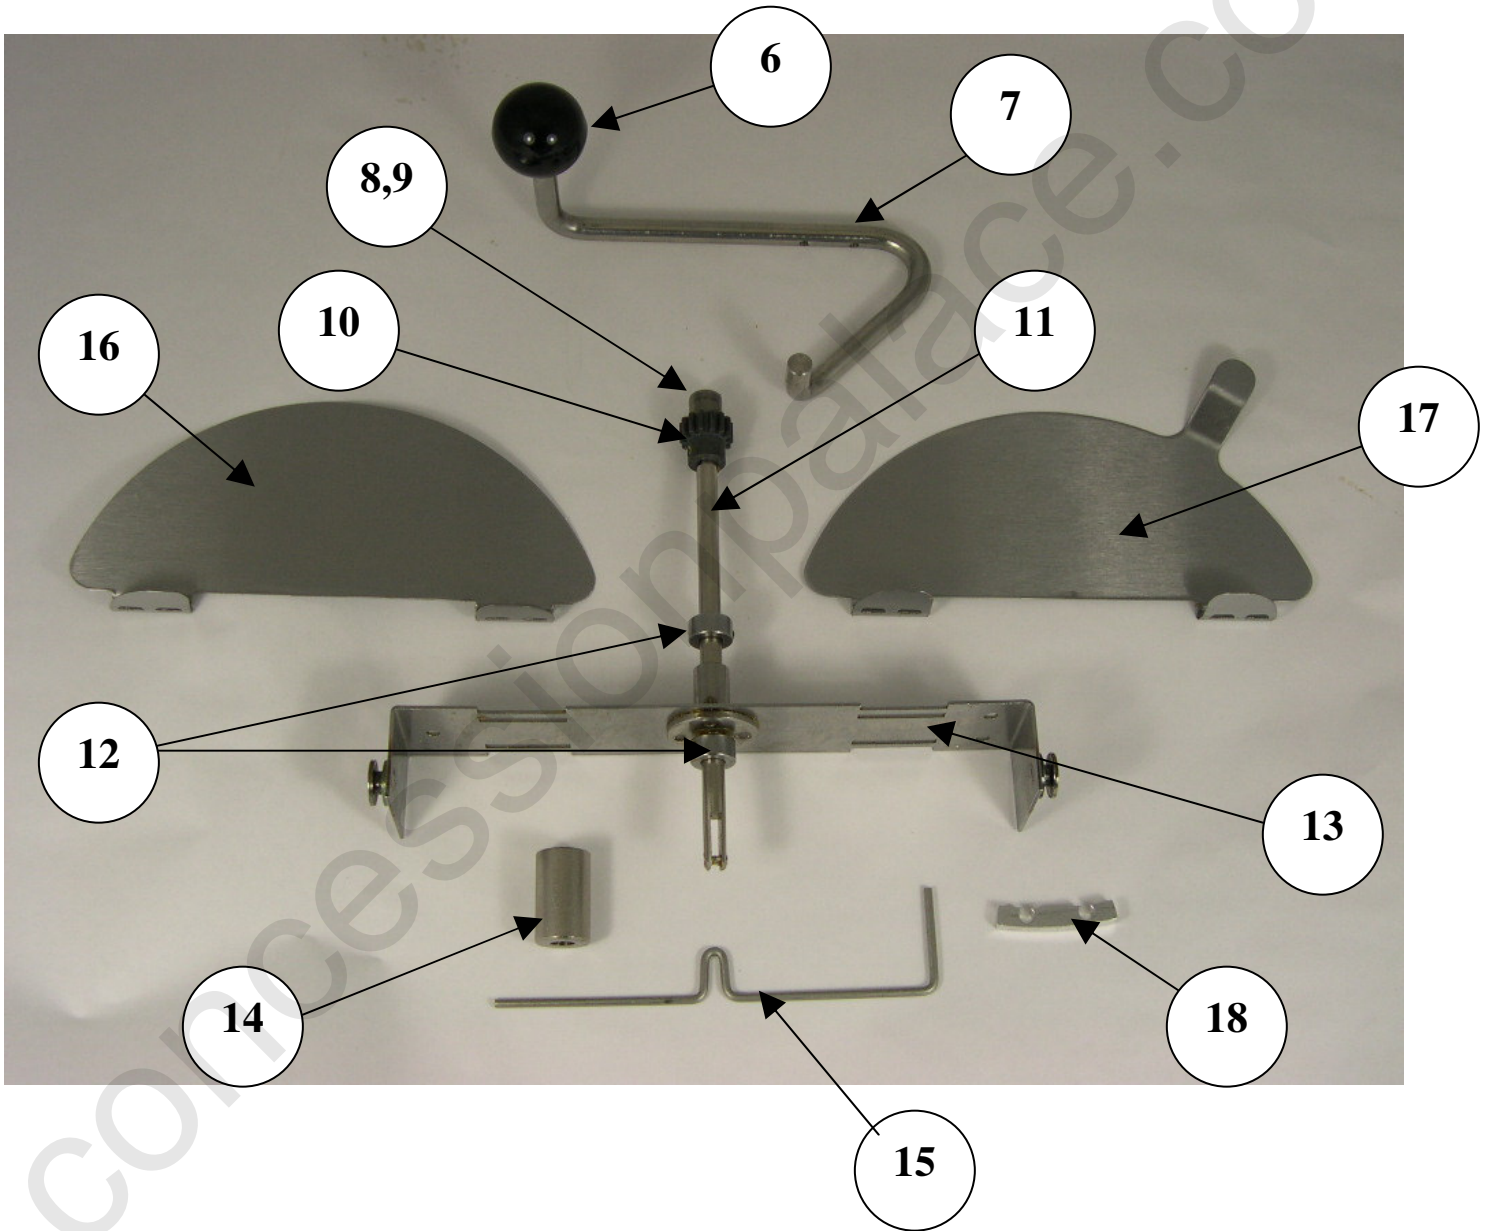

PART LIST - 4 oz. KETTLE ASSEMBLY

Item #	Part No.	Description
1	76089	Kettle Thermostat (450 Degree)
2	76702	Hi-Limit Thermostat (525 Degree)
3	58008	Kettle / Heat Element Assembly
4	49368	Kettle Gasket
5	49431	Kettle Shell
6	47110	Dump Handle Knob
7	49314	Dump Handle
8	47106	Needle Bearing
9	49701	Retaining Ring
10	47060	Spur Gear
11	49437	Agitator Shaft
12	46649	Set Collars (2)
13	59907	Crossbar
14	49013	Agitator Weight
15	49011	Stir Rod
16	49016	Rear Lid
17	49017	Front Lid
18	49362	Spacer, Dump Handle
19	49328	Kettle Cord Complete (Individual Parts Below)
	49086	Kettle Lead Wire (Red)
	49087	Kettle Lead Wire (White)
	49159	Kettle Lead Wire (Green)
	49329	15 Amp Kettle Plug
	46241	90 Degree Connector
	77079-16	Conduit
	77080NM	Conduit Bushings (2)

ELECTRICAL SCHEMATIC

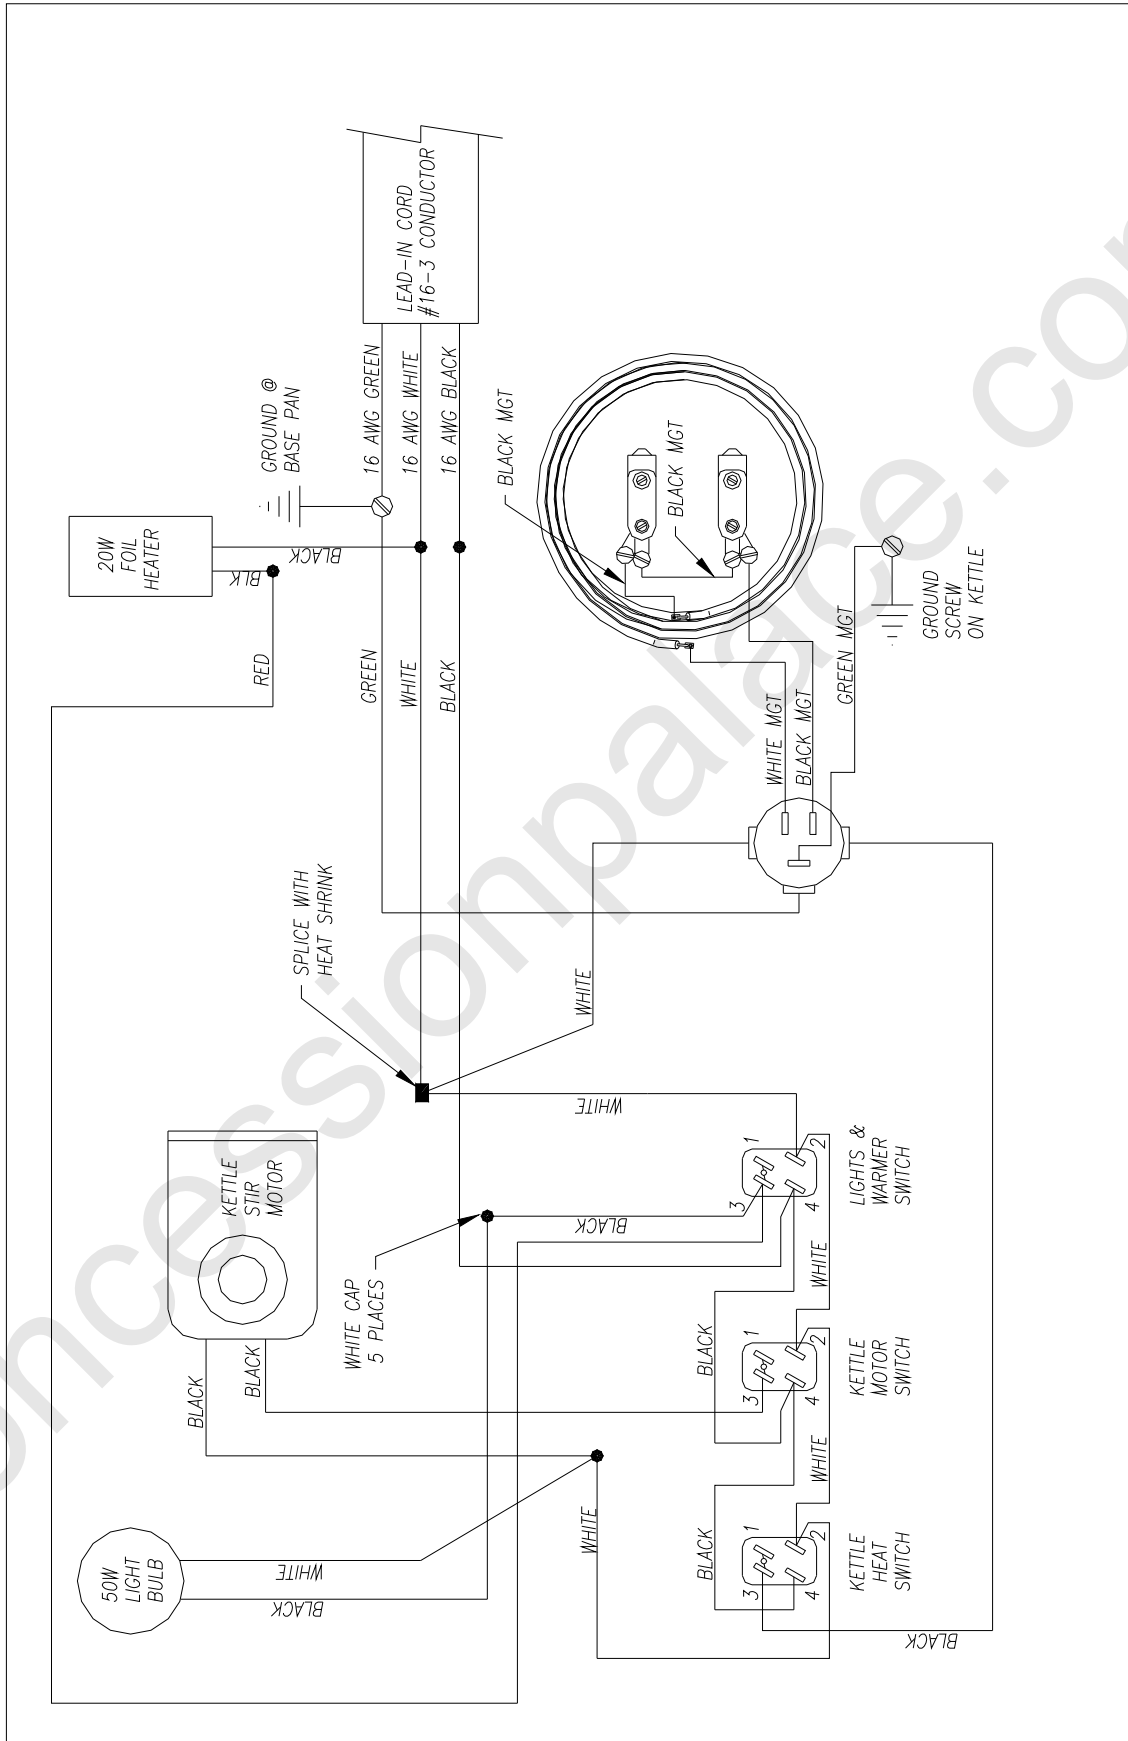

WARRANTY

WE WARRANT to the original purchaser the Gold Medal equipment sold by us to be free from defects in material or workmanship under normal use and service. Our obligation under this warranty shall be limited to the repair or replacement of any defective part for a period of six (6) months from the date of sale to the Original Purchaser with regard to labor and two (2) years with regard to parts and does not cover damage to the equipment caused by accident, alteration, improper use, voltage, abuse, or failure to follow instructions.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES EXPRESSED OR IMPLIED, AND OF ALL OTHER OBLIGATIONS OR LIABILITIES ON OUR PART, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. We neither assume, nor authorize any other person to assume for us, any other obligation or liability in connection with the sale of said GOLD MEDAL equipment or any part thereof.

The term "Original Purchaser" as used in this warranty shall be deemed to mean that person, firm, association, or corporation who was billed by the GOLD MEDAL PRODUCTS COMPANY, or their authorized distributor for the equipment.

THIS WARRANTY HAS NO EFFECT AND IS VOID UNLESS THE ORIGINAL PURCHASER FIRST CALLS GOLD MEDAL PRODUCTS COMPANY AT 1-800-543-0862 TO DISCUSS WITH OUR SERVICE REPRESENTATIVE THE EQUIPMENT PROBLEM, AND, IF NECESSARY, FOR INSTRUCTIONS CONCERNING THE REPAIR OR REPLACEMENT OF PARTS.

NOTE: This equipment is manufactured and sold for commercial use only.



GOLD MEDAL PRODUCTS COMPANY

10700 Medallion Drive

Cincinnati, Ohio 45241-4807 USA

www.gmpopcorn.com

Phone: 1-800-543-0862

Fax: 1-800-542-1496